


SCREWS

Self-tapping screws are available for securing PCBs and mounting plates as well as components. [To find out which screw diameters fit which OKW enclosures, please refer to this list.](#)

Installation instructions: Please note the different types of cross-head screws (PZ / PH) as well as the size of the screwdriver.

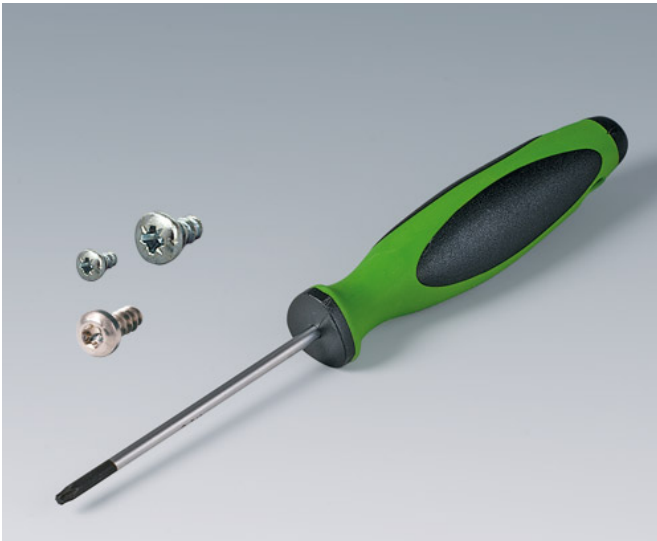

Select Versions



A0304031
Self-tapping screws 2.2 x 5 mm
(PZ1)



A0305031
Self-tapping screws 2.5 x 6 mm
(PZ1)



A0306031
Self-tapping screws 3 x 6 mm
(PZ1)



A0308031
Self-tapping screws 3 x 8 mm
(PZ1)

SCREWS




A0308132
Self-tapping screw 3 x 8 mm
(T10)
Stainless steel



A0325060
Self-tapping screw 2.5 x 6 mm
(T8)
Stainless steel



A0325080
Self-tapping screws 2.5 x 8 mm
(PZ1)

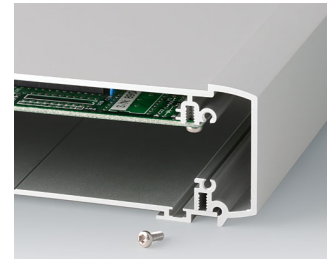

A0330080
Screw M3 x 8 mm (T10)
Stainless steel



A0399T06
Torx T6 screwdriver



A0399T08
Torx T8 screwdriver



A9199008
Set of screws



B5111201
Set of screws

Accessory



A0399T10
Torx T10 screwdriver

Subject to technical modification without notice. © by OKW Gehäusesysteme, Buchen/Germany.